LENOXX

CD114BR & CD114BL

CD/MP3 TURNTABLE WITH AM/FM RADIO DOUBLE CASSETTE AND USB/SD RECORDING

INSTRUCTION MANUAL

MP3 PLAYBACK USB SD CARD ENCODE TURNTABLE COMPACT DISC DIGITAL AUDIO

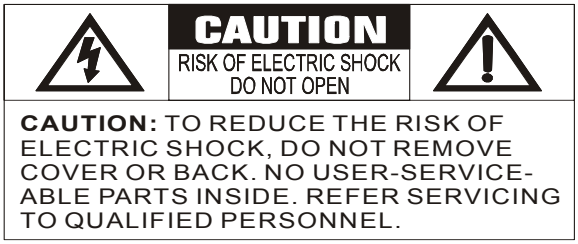
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICE-ABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

This symbol is intended to alert you to the presence of un-insulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

IMPORTANT SAFETY INSTRUCTIONS

Careful attention is devoted to quality standards in the manufacturing of your **CD114**, and safety is a major factor in its design. However, safety is also your responsibility. This section lists important information that will help you properly use and enjoy your **CD114** and accessories. Read all the included safety and operating instruction before using your **CD114** follow them closely, and retain them for future reference.

Heed Warnings:

Follow all warnings on the product and in the operating instructions.

Cleaning:

Unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Do not use liquid or aerosol cleaners.

Attachments:

Do not use attachments accessories not recommended by the product manufacturer, as they might create a hazard.

Water and Moisture:

Do not use this product near water (for example, near a bathtub, washbowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool).

Caution:

Do not place this product on an unstable stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

Ventilation:

Slots and openings in the cabinet provide ventilation, ensure reliable operation, and protect from overheating. Do not block or cover these opening, and do not place the product on a bed, sofa, rug, or other similar surface. Do not place the product in a built-in installation such as a bookcase or rack unless it provides proper ventilation.

Power Sources:

Operate this product using only the power source indicated on its marking label. If you are not sure of your home's power type, consult your product dealer or local power company.

Power Cord Protection:

Route power cords so they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

Non-use Periods:

Unplug the product's power cord when you will not use it for extended periods.

Lightning:

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power surges.

Overloading:

Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

Object and Liquids:

Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

Servicing:

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. **Refer all servicing to qualified service personnel.**

Damage Requiring Service:

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- **When the power cord or plug is damaged.**
- **If liquid has been spilled on, or objects have fallen into the product.**
- **If the product has been exposed to rain or water.**
- **If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.**
- **If the product has been dropped or damaged in any way.**
- **When the product exhibits a distinct change in performance.**
- **Please refer to the product warranty card (included).**

Replacement parts:

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or having the same characteristics as the original part.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check:

Upon completion of service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Heat:

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Connection:

Make sure before start connecting the unit to any extras, the power cord must be disconnected from the **A/C 240** Volts power outlet. **This avoiding: electric shock, or other hazards.**

Laser:

Do not open, CD lid or remove the cabinet cover. Expose to laser may cause damage to eyesight.

LOCATION OF CONTROLS

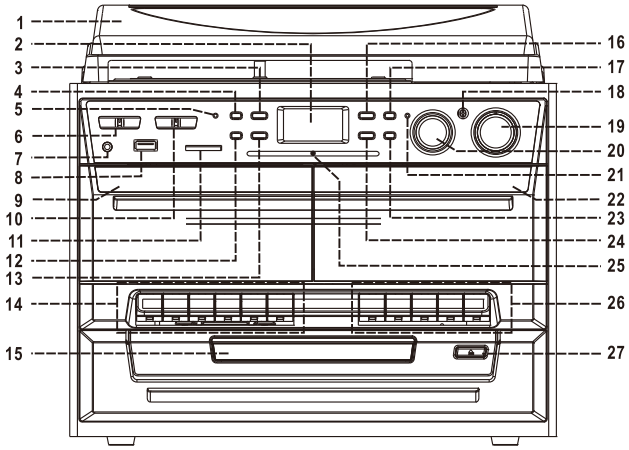

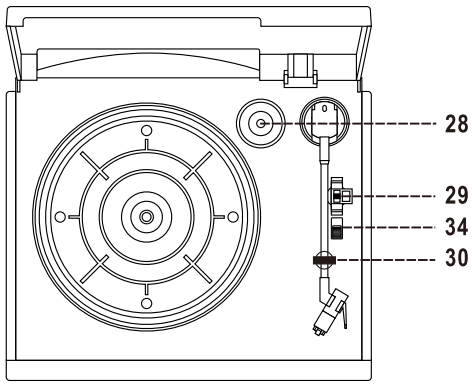

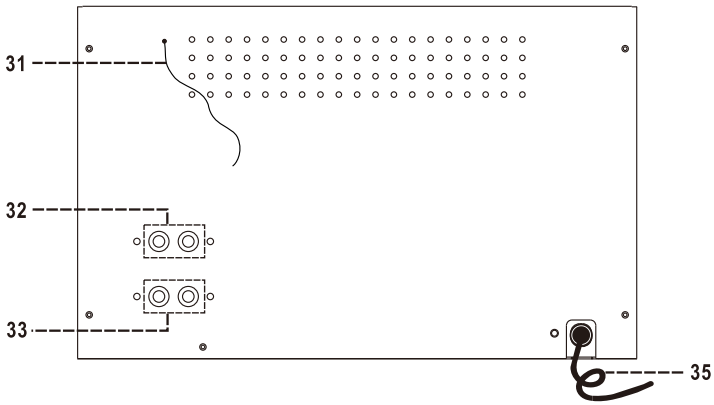

1) DUST COVER
2) LCD DISPLAY
3) RECORD BUTTON
4) SOURCE BUTTON
5) POWER LED INDICATOR
6) FUNCTION SELECTOR
7) 3.5MM HEADPHONE JACK
8) USB SOCKET
9) CASSETTE DECK (1) DOOR
10) BAND/FM STEREO SELECTOR
11) SD/MMC CARD SLOT
12) MP3 FOLDER UP BUTTON
13) SKIP DOWN⏮ BUTTON
14) DECK 1 CONTROL KEY
    - ● RECORD KEY
    - ► PLAYBACK KEY
    - ◄◄ REWIND KEY
    - ►► FAST FORWARD KEY
    - ■⏏ STO/EJECT KEY
    - ⏸ PAUSE KEY
15) CD DOOR
16) PLAY/PAUSE/STOP►⏸/■ BUTTON
17) X-BASS ON/OFF BUTTON
18) REMOTE SENSOR
19) POWER ON/OFF / VOLUME UP/DOWN KNOB
20) TUNING KNOB
21) FM STEREO LED INDICATOR
22) CASSETTE DECK (2) DOOR
23) HI-SPEED DUBBING BUTTON
24) SKIP UP⏭ BUTTON
25) LED DIAL POINTER
26) DECK (2) CONTROL KEYS
27) CD DORR OPEN BUTTON
28) SPINDLE ADAPTOR
29) 33/45/78 RPM SPEED SELECTOR
30) PICK-UP HOLDER
31) FM ANTENNA
32) LINE OUT SOCKET
33) SPEAKER TERMINAL
34) AUTO STOP ON/OFF SWITCH
35) AC LINE CORD

CAUTION:
USAGE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULTE IN HAZARDOUS RADIATION EXPOSURE.
THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT QUALIFIED SERVICE PERSONNEL.

PRECAUTIONS FOR USE

INSTALLATION

- UNPACK ALL PARTS AND REMOVE PROTECTIVE MATERIAL.
- DO NOT CONNECT THE UNIT TO THE MAINS BEFORE CHECKING THE MAINS VOLTAGE AND BEFORE ALL OTHER CONNECTIONS HAVE BEEN MADE.
- DO NOT COVER ANY VENTS AND MAKE SURE THAT THERE IS A SPACE OF SEVERAL CENTIMETERS AROUND THE UNIT FOR VENTILATION.

TOP COVER ASSEMBLY

1. PUSH THE METAL BRACKET TO REAR SIDE.
2. CONNECT THE METAL BRACKET TO THE TOP COVER
3. CONNECT THE HINGE OF THE TOP COVER TO THE MAIN UNIT

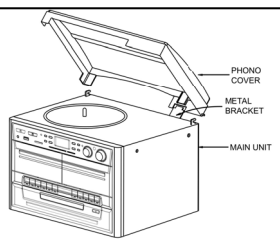

CONNECTION

1. CONNECT THE POWER CORD (35) TO AC OUTLET AND CONNECT THE SPEAKER JACK TO THE SPEAKER TERMINAL (33) LOCATED ON THE REAR SIDE OF UNIT.
2. TURN THE POWER ON/OFF BUTTON (19) CLOCKWISE UNTIL HEAR A " CLICK " SOUND & THE POWER LED INDICATOR (5) LIGHT UP.
3. SWITCH THE FUNCTION SELECTOR (6) TO " TUNER " FUNCTION. IF THE POWER LCD DISPLAY (2) LIGHT UP WITH BLUE BACKLIGHT, IT'S MEAN THE POWER SUPPLY IS NORMAL. NOW YOUR SYSTEM IS READY TO PLAY THE MUSIC.

LISTENING TO RADIO

MANUAL TUNING

1. TURN FUNCTION SELECTOR (6) TO SELECT " TUNER " MODE AND THEN SELECT DESIRE BAND (AM OR FM OR FM-STEREO) AT " BAND/FM-ST " SELECTOR (10).
2. TUNE TO THE DESIRE STATION BY TURNING THE TUNING KNOB (18).
3. ADJUST THE VOLUME KNOB (19) TO THE DESIRE VOLUME LEVEL.

FM & FM-STEREO RECEPTION

- SET THE " BAND/FM-ST " SELECTOR (10) AT " FM " POSITION. PROGRAMS ARE RECEIVED IN MONO MODE. IN PARTICULAR WHEN STEREO SIGNALS ARE WEAK. IT IS PREFERABLE TO RECEIVE THE PROGRAM IN MONO.
- SET THE " BAND/FM-ST " SELECTOR (10) AT "FM-ST" POSITION FOR RECEIVING STEREO PROGRAMS. THE LED "FM-ST" INDICATOR WILL LIGHT UP TO SHOW FM STEREO PROGRAM IS RECEIVING.

HINTS FOR BEST RECEPTION:-

- AM : THE RECEIVER HAS A BUILT-IN AM BAR ANTENNA. IF AM RECECPTION IS WEAK, SLIGHTLY ROTATE OR RE-POSITIONING OF THE UNIT WILL USUALLY IMPROVE THE AM RECEPTION.
- FM : THE RECEIVER HAS A BUILD-IN FM WIRE ANTENNA (31) HANGING AT THE REAR CABINET. THIS WIRE SHOULD BE TOTALLY UNRAVELED AND EXTENDED FOR BEST RECEPTION.

PLAYING COMPACT DISC

- **GETTING START**

1. TURN FUNCTION SELECTOR (6) TO SELECT " CD/USB/SD " MODE.
2. PRESS "OPEN/CLOSE" BUTTON (27) TO OPEN THE CD DOOR (15).
3. PLACE A CD WITH THE PRINTED SIDE FACING UP INSIDE THE TRAY & THEN CLOSE THE CO DOOR.
4. FOCUS SEARCH IS PERFORMING, THE LCD DISPLAY (2) WILL SHOW THE TOTAL NUMBER OF TRACKS & TOTAL PLAYING TIME.

- **PLAY / PAUSE / STOP MODE ▶II / ■**

1. PRESS THE " PLAY/PAUSE/STOP " BUTTON (16) TO START PLAYBACK, THE FIRST TRACK WILL START PLAYBACK.
2. TO INTERRUPT, PRESS THE " PLAY/PAUSE/STOP " BUTTON (16) ONCE, THE PLAYING TIME WILL BE FREEZE & FLASHING ON THE LCD DISPLAY (2). PRESS AGAIN TO RESUME NORMAL PLAYBACK.
3. IF PRESS AND HOLD THE " PLAY / PAUSE STOP " BUTTON (16) FOR OVER 2 SECONDS DURIGN PLAYBACK MODE. THE SYSTEM WILL GO TO STOP MODE.

- **SKIP/SEARCH MODE (SKIP/SEARCH UP ▶▶I / SKIP/SEARCH DOWN I◀◀)**

1. DURING PLAY OR PAUSE MODE, IF "SKIP UP" BUTTON (24) IS PRESSED. IT WILL GO TO NEXT TRACK AND DISPLAY THE TRACK NO. AND THEN REMAIN THE PLAY OR PAUSE MODE.
2. DURING PLAY OR PAUSE MODE, IF "SKIP DOWN" BUTTON (13) IS PRESSED. IT WILL GO BACK TO THE BEGINNING OF THE TRACK, ORIGINAL TRACK NO. IS DISPLAY AND REMAIN THE PLAY OR PAUSE MODE.
3. AFTER STEP 2, PRESS "SKIP DOWN" BUTTON (13) AGAIN WILL GO TO THE PREVIOUS TRACK AND REMAIN THE PLAY OR PAUSE MODE.
4. IF PRESS AND HOLD THE " SKIP UP/DOWN BUTTON " (24,13) DURING CD/MP3 PLAYABCK, THE PLAYING TRACK WILL GO FAST FORWARD OR BACKWARD UNTIL THE BUTTON BEING RELEASED.

- **FOR MP3 DISC**

1. PRESS " FOLDER UP " BUTTON (12), THE FOLDER NO. WILL GOES UP
2. PRESS " SKIP UP " OR SKIP DOWN (24,13) BUTTON, THE TRACK NO. CHANGE.
3. WHEN THE DESIRED TRACK IS BEING SELECTED, PRESS THE CD " PLAY/PAUSE/STOP " BUTTON (16) TO START PLAYBACK.

ID3 (TRACK/ALBUM TITLE) FUNCTION (BY REMOTE HANDSET)

1. PRESS THE " INFO " BUTTON DURING PLAYBACK OF MP3 DISC, THE SONG TITLE IS BEING DISPLAYED. DISPLAYED. PRESS THE " INFO " BUTTON AGAIN TO DISABLE THE FUNCTION.

SONG TITLE/FOLDER NAME SEARCH FUNCTION (BY REMOTE HANDSET)

YOU CAN SEARCH THE TRACK BY THE TITLE/FOLDER NAME IN DISC DURING STOP MODE:-

1. PRESS THE " FIND " BUTTON ONCE, THEN PRESS THE "SKIP UP" (OR SKIP DOWN) BUTTON (24,13), YOU CAN SEARCH THE TITLE OF EACH SONG ONE BY ONE UNDER ALPHABET ORDER ON LCD DISPLAY, THEN PRESS THE CD " PLAY/PAUSE/STOP " BUTTON (16) TO START THE PLAYBACK OF THE SELECTED TRACK.
2. PRESS AGAIN " FIND " BUTTON, THE FOLDER NAME IS BEING DISPLAYED. THEN PRESS THE "SKIP UP" (OR SKIP DOWN) BUTTON TO SELECT THE DESIRED FOLDER, AND PRESS THE CD" PLAY/PAUSE/STOP " BUTTON (16) TO START THE PLAYBACK OF ALL TRACKS INSIDE THAT SELECTED FOLDER.

REMARK:-

- IN THAT CASE OF NO NAME HAD BEEN ASSIGNED FOR THE TRACK, " NONE " OR " UNKNOWN " IS BEING DISPLAYED" ON LCD DISPLAY (2).

- THE LCD DISPLAY (2) SUPPORT ENGLISH LANGUAGE ONLY

MP3 TRACK FORMAT REQUIREMENT:-

- MP3 BIT RATE : 32 KBPS~256 KBPS
- THE PERFORMANCE OF PLAYING MP3 DISC IS VARIOUS FROM THE QUALITY OF RECORDING DISC AND THE METHOD OF RECORDING. FURTHERMORE, THE SEARCHING LEAD-TIME FOR MP3-CD IS LONGER THAN NORMAL CD DUE TO DIFFERENCE FORMAT.

- **REPEAT/INTRO/RANDOM MODE**

PRESS THE REPEAT/INTRO/RANDOM BUTTON BEFORE OR DURING PLAYBACK, A SINGLE TRACK, SINGLE FOLDER (MP3 ONLY) OR ALL THE TRACKS CAN BE PLAYED IN DIFFERENCE MODE AS FOLLOW:-

FOR CD



PLAY MODE	INDICATOR ON LCD DISPLAY
REPEAT TRACK	↻
REPEAT ALL	↻ ALL
INTRO	INTRO
RANDOM	RANDOM
OFF MODE	----------

FOR MP3 DISC

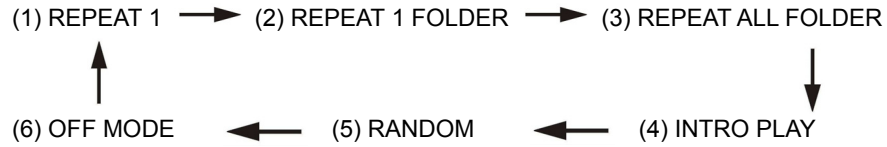

PLAY MODE	INDICATOR ON LCD DISPLAY
REPEAT SINGLE TRACK	↻
REPEAT ALL TRACKS	↻ ALL
REPEAT SINGLE FOLDER	↻ FOLDER
INTRO PLAY MODE	INTRO
RANDOM MODE	RANDOM
OFF MODE	----------

- **REPEAT PLAY**

YOU CAN LISTEN THE DESIRED TRACKS OR FOLDER REPEATEDLY BY THIS FUNCTION.

- **INTRO PLAY (BY REMOTE CONTROL)**

YOU CAN LISTEN TO THE BEGINNING (10 SECONDS) OF EACH TRACK IN A CD BY THIS FUNCTION & SAVING YOUR TIME TO SEARCH THE DESIRE SONG

- **RANDOM PLAY**

YOU CAN LISTEN ALL THE TRACKS OR FOLDER IN A RANDOM ORDER BY THIS FUNCTION

CD DISC PROGRAMMING (BY REMOTE CONTROL)

UP TO 40 TACKS CAN BE PROGRAMMED FOR CD OR MP3 FILE AND PLAY IN ANY ORDER. BEFORE USE, BE SURE THE SYSTEM IS AT STOP MODE BEFORE PROGRAMMING:-

1. SET IN CD/USB MODE & STOP THE CD PLAYBACK.
2. PRESS THE “PROGRAM” BUTTON, “ PROG “ WILL APPEAR ON LCD DISPLAY (2). MOREOVER, IT WILL INDICATE PROGRAM NO. AND DIGITS FOR TRACK NO. TO BE PROGRAMMED.
3. SELECT A DESIRED TRACK BY PRESSING SKIP ⏭ (24) OR ⏮ BUTTONS (13).
4. PRESS THE “ PROGRAM ” BUTTON TO STORE THE TRACE INTO MEMORY.
5. REPEAT STEPS 3 AND 4 TO ENTER ADDITIONAL TRACKS INTO THE MEMORY IF NECESSARY.
6. WHEN ALL THE DESIRED TRACKS HAVE BEEN PROGRAMMED, PRESS CD “ PLAY/PAUSE/STOP ” ⏯/⏹ BUTTON (16) TO PLAY THE DISC IN ASSIGNED ORDER.
7. TO CANCEL THE PROGRAMMED FILE, PRESS “STOP” BUTTON ON REMOTE HANDSET UNTIL “ PROG “ IS DISAPPEAR ON LCD DISPLAY (2)

PLAYBACK OF MP3 SONG VIA USB STORAGE MEDIA OR MEMORY CARD

CONNECTING

THE SYSTEM IS ABLE TO DECODE AND PLAYBACK ALL MP3 FILE WHICH STORED IN THE MEMORY MEDIA WITH USB CONNECTING PORT OR SD/MMC MEMORY CARD.

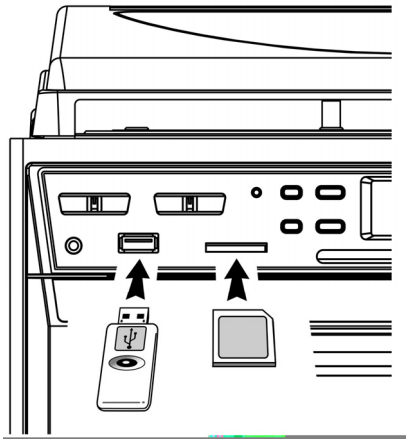

1. SET FUNCTION SELECTOR (6) AT USB/SD POSITION AND THEN PRESS SOURCE BUTTON (4) TO SELECT **“** USB OR CARD**”** MODE.
2. PLUG-IN THE USB PLUG WITH THE FACE UP & MAKE SURE IT GOING INTO COMPLETELY OR INSERT THE MEMORY CARD IN THE DIRECTION OF THE ARROW AS SHOWN IN THE LABEL ON THE UNDERSIDE OF THE MEMORY CARD SLOT COVER. INSERT STRAIGHT WITHOUT BENDING.

- **CONNECTING THE USB UPSIDE DOWN OR BACKWARDS COULD DAMAGE THE AUDIO SYSTEM OR THE STORAGE MEDIA (USB THUMB DRIVE / SD/MMC CARD). CHECK TO BE SURE THE DIRECTION IS CORRECT BEFORE CONNECTION.**

3. THE SYSTEM WILL START READING THE STORAGE MEDIA AUTOMATICALLY AFTER CONNECTING, AND LCD DISPLAY (2) WILL SHOW THE TOTAL NUMBER OF MP3 FILES AND TOTAL NUMBER OF FOLDER BEING DETECTED.
4. REPEAT THE SAME PLAYBACK PROCEDURE AS PLAYING CD/MP3 DISC AS ABOVE

REMARK

- THE SYSTEM CAN DETECT AND READ THE FILE UNDER MP3 FORMAT ONLY THOUGH THE USB PORT.
- **IF CONNECT THE SYSTEM TO MP3 PLAYER VIA THE USB SOCKET, DUE TO VARIANCES IN MP3 ENCODING FORMAT, SOME MP3 PLAYER MAY NOT BE ABLE TO PLAY VIA THE USB SOCKET. THIS IS NOT A MAUFUNCTION OF THE SYSTEM.**
- **USB PORT DOES NOT SUPPORT CONNECTION WITH USB EXTENSION CABLE AND IS NOT DESIGNED FOR COMMUNICATION WITH COMPUTER DIRECTLY.**

PHONO

NOTED:

- REMOVE THE STYLUS PROTECTOR.
- BE SURE THAT THE TONE ARM IS BEING DETACHED FROM THE TONE ARM REST BEFORE OPERATING AND RE-SECURED AGAIN AFTERWARDS.

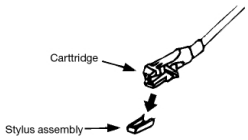

1. SELECT TO “ PHONO ” FUNCTION (6).
2. SET THE SPEED SELECTOR TO THE PROPER POSITION DEPENDING ON THE RECORD TO BE PLAYED.
3. PLACE THE RECORD ON THE PLATTER (USE THE SPINDLE ADAPTOR IF REQUIRED).
4. LIFT THE TONE ARM FROM THE REST AND SLOWLY MOVE IT TO THE RECORD SIDE. THE PLATTER WILL START TO ROTATE.
5. PLACE THE TONE ARM TO THE DESIRED POSITION OF THE RECORD.
6. ADJUST THE VOLUME TO THE DESIRED LEVEL.
7. AT THE END OF RECORD, THE PLATTER WILL AUTOMATICALLY STOP ROTATING. LIFT THE TONE ARM FROM THE RECORD AND RETURN IT TO THE REST.
8. TO STOP MANUALLY, LIFT THE TONE ARM FROM THE RECORD AND RETURN IT TO THE REST.

REMARK : AS SOME KIND OF RECORD THE AUTO-STOP AREA WAS OUT OF THE UNIT SETTING, SO IT WILL STOP BEFORE THE LAST RACK FINISH. IN THIS CASE, SELECT THE AUTO-STOP SWITCH TO “ OFF “ POSITION, THEN IT WILL RUN TO THE END OF THE RECORD BUT WILL NOT STOP AUTOMATICALLY (TURN OFF THE POWER BUTTON OR SWITCH BACK THE AUTO-STOP SWITCH (32) TO “ ON “ POSITION TO STOP THE PLATTER ROTATE). THEN PUT BACK THE TONE ARM TO THE REST POSITION.

LINE OUT CONNECTION

YOU CAN CONNECT THE SYSTEM TO YOUR WHOLE HI-FI SYSTEM BY CONNECTING THE LINE OUT SOCKET (32) TO THE AUXILIARY INPUT SOCKET WITH A RCA CABLE (NOT INCLUDED).

LISTING TO TAPE

GENERAL OPERATION

STOP / EJECT KEY	PRESS TO STOP ALL DECK OPERATION. PRESS AGAIN TO OPEN THE CASSETTE DOOR.
FAST FORWARD KEY & FAST REWIND KEY	PRESS TO START RAPID TAPE WINDING IN EITHER FORWARD OR REVERSE DIRECTION. PRESS STOP / FAST REWIND KEY EJECT KEYS WHEN THE CASSETTE SPOOLS STOP TURNING.
PLAY KEY	PRESS TO START PLAYING TAPE.
PAUSE KEY	PRESS TO STOP TAPE OPERATION TEMPORARILY. PRESS AGAIN TO RESUME PLAY.
RECORD KEY (DECK 1 ONLY)	PRESS TOGETHER WITH PLAY KEY TO START TAPE RECORDING.

PLAYBACK

- SELECT “TAPE” FUNCTION (6).
- PUT IN THE CASSETTE TAPE.
- PRESS PLAY KEY TO ACTIVE PLAYBACK
- ADJUST THE VOLUME CONTROL (19) TO THE DESIRE LEVEL.
- USE PAUSE KEY WHEN YOU WANT TO STOP PLAYBACK TEMPORARILY.
- PRESS STOP / EJECT KEY WHEN FINISHED.

REMARK:

IT IS POSSIBLE TO PLAY BOTH CASSETTE PLAYERS ONE AFTER THE OTHER. IF YOU PRESS THE BUTTON “PAUSE” AND “PLAY” AT DECK 1 AND BUTTON “PLAY” AT DECK 2, THAN THE TAPE OF DECK 1 WILL BE START TO PLAY AUTOMATICALLY AFTER THE TAPE OF DECK 2 IS FINISHED.

RECORDING

A. RECORDING FROM TAPE (DECK 2 TO DECK 1)

THIS UNIT ENABLES YOU TO DUPLICATE A PRE-RECORDED TAPE TO ANOTHER TAPE. IT IS PERFORMED ONLY ONE WAY FROM DECK 2 (PLAYBAK) TO DECK 1 (RECORDING).

DUBBING AT NORMAL SPEED

- SELECT “ TAPE ” FUNCTION (6).
- INSET A PRE-RECORDED CASSETTE INTO DECK 2 AND A BLANK CASSETTE TAPE INTO DECK 1.
- PRESS THE “ PAUSE ” KEY AND THEN PRESS THE “ RECORD ” AND “ PLAY ” KEY AT DECK 1.
- PRESS THE “ PLAY ” KEY TO START PLAYBACK AT DECK 2 & THEN PRESS “ PAUSE ” KEY AT DECK 1 TO START DUBBING.
- PRESS “ PAUSE ” KEY AT DECK 1 & “ STOP ” KEY AT DECK 2 WHEN FINISH.

DUBBING AT HIGH SPEED

THIS UNIT IS EQUIPPED WITH A HIGH SPEED DUBBING SYSTEM WHICH CAN SAVE THE TIME FOR DUBBING BY 2/3 WHEN COMPARE TO NORMAL SPEED.

- PRESS THE “ DUBBING “ BUTTON (23) TO “ HI “ POSITION AND THEN FOLLOW THE SAME PROCEDURES AS STIPULATED IN “DUBBING AT NORMAL SPEED”.
- WHEN DUBBING A PRE-RECORDED CASSETTE TAPE AT HIGH SPEED, A CHATTERING SOUND IS BEING HEARD. TO AVOID THIS, SET THE VOLUME CONTROL TO A MINIMUM LEVEL.
- DO NO ACTIVE/DE-ACTIVE THE “HI-NOR. DUBBING” BUTTON DURING DUBBING, THIS WILL VARY THE SPEED OF RECORDING AND MAY BE DAMAGE THE CASSETTE TAPE.

B. RECORDING FROM RADIO

- SELECT “ TUNER ” FUNCTION (6).
- TUNE TO THE DESIRE STATION AND INSERT A BLANK CASSETTE TAPE IN DECK 1.
- PRESS “RECORD” & “PLAY“ KEY TO START RECORDING.
- PRESS “PAUSE” KEYS AND THEN “STOP/EJECT” KEY WHEN FINISH.

C. RECORDING FROM PHONO

- SELECT “PHONO” FUNCTION (6).
- INSERT A BLANK CASSETTE TAPE IN DECK 1 WHICH SUITABLE FOR RECORDING.
- PRESS “PAUSE” KEY FIRST AND THEN “RECORD” & “PLAY“ KEY AT CASSETTE. RECORDING FUNCTION IS NOW STAND BY.
- START THE PLAYBACK AT PHONO AND THEN PRESS “PAUSE KEY” AT CASSETTE TO START RECORDING.
- TO STOP RECORDING, PRESS “PAUSE ” KEY AND THEN “STOP/EJECT” KEY ON CASSETTE TAPE DECK FIRST, THEN RETURN THE TONE ARM BACK TO THE REST STATION AT PHONO.

ENCODING OF PHONO OR CASSETTE TAPE INTO MP3 FILE

THE SYSTEM IS ABLE TO ENCODE RECORD (FROM PHONO) AND CASSETTE DECK FILE (FROM TAPE) TO MP3 FORMAT AND RECORDING AT MEMORY MEDIA WITH USB CONNECTING PORT OR SD/MMC CARD.

A) PHONO ENCODING

1) PLUG IN THE USB PEN DRIVE FOR RECORDING (MAKE SURE IT AHD ENOUGH EMPTY SPACE).
2) SET THE FUNCTION BUTTON (6) TO “ PHONO “ POSITION AND THEN PRESS THE “ RECORD “ BUTTON (3) DIRECTLY.
3) THE LCD DISPLAY (2) WITH SHOW THE WORD “ **USB** “ AND FLASHING, AFTER THEN DISPLAY “ ⇆ “ & “ REC “ AND FLASHING. NOW THE SYSTEM IS STARTING THE ENCODING MODE.
4) START PLAYBACK AT PHONO FOR THE TRACK WHICH YOU WANT TO RECORD TO USB OR SD CARD.
5) AFTER FINISHING OF RECODING, PRESS AND HOLD THE “ RECORD “ BUTTON (3) UNTIL THE LCD STOP FLASHING AND RETURN TO “ PHONO “ MODE.

B) CASSETE ENCODING

1) PLUG IN THE USB PEN DRIVE FOR RECORDING (MAKE SURE IT AHD ENOUGH EMPTY SPACE).
2) SET THE FUNCTION BUTTON (6) TO “ TAPE “ MODE AND THEN PRESS THE “ RECORD “ BUTTON (3) DIRECTLY.
3) THE LCD DISPLAY (2) WITH SHOW THE WORD “ **USB** “ AND FLASHING, AFTER THEN DISPLAY “ ⇆ “ & “ REC “ AND FLASHING. NOW THE SYSTEM IS STARTING THE ENCODING MODE.
4) START PLAYBACK OF CASSETTE TAPE(AT EITHER DECK 1 OR 2) WHICH THE TRACK YOU PREPARE TO ENCODING TO MP3 FORMAT.
5) AFTER FINISH OF RECODING, PRESS AND HOLD THE “ RECORD “ BUTTON (3) UNTIL THE SYMBOL “ ⇆ “ & “ REC “ DISAPPEAR AND RESUME TO “ TAPE “ MODE ON LCD DISPLAY (2).

C) FILE COPY FROM USB TO SD OR VICE VERSA

THE SYSTEM ALLOW TO COPY THE FILES FROM THE USB SORUCE TO SD/MMC CARD BY PRESSING THE “ RECORD “ BUTTON (3):-

I) COPYING 1 TRACK (ASSUME COPY FROM SD CARD TO USB MODE)

1. PERFORM NORMAL PLAYBACK OF THE TRACK AT SD/MMC CARD YOU WANT TO COPY,
2. PRESS “ RECORD “ BUTTON (3) DURING THE PLAYBACK OF THE DESIRE TRACK, UNIT WILL DISPLAY “ ⇆ “ & “ REC “ AND FLASHING. COPYING IS PERFORMING NOW.
3. AFTER COPYING IS COMPLETED, UNIT WILL STOP PLAYBACK AUTOMATICALLY.

II) COPYING ALL TRACKS (ASSUME COPY FROM SD CARD TO USB MODE)

1. SELECT “ SD “ MODE AND THEN INSERT THE SD/MMC CARD YOU WANT TO COPY.
2. AFTER READING OF CARD INFORMATION IS COMPLETED, PRESS THE “ RECORD “ BUTTON (3) AND THE UNIT WILL DISPLAY “ ⇆ “ & “ REC “ AND FLASHING. COPYING IS PERFORMING NOW.
3. AFTER COPYING IS COMPLTED, UNIT WILL STOP AUTOMATICALLY.

REMARK:-

- THE RECORDING SPEED IS 1:1 AND ACCORDING TO THE ACTUAL PLYING TIME OF THE PHONO OR TAPE
- DURING COPY MODE, THE SYSTEM WILL COPY THE MP3 FILE ONLY.
- THE SYSTEM WILL CREATE A “ AUDIO “ FOLDER FOR ENCODING FILE AND “ FCOPY “ FOR COPYING FILE.
- THE RECORDING FORMAT IS PRESET AT – MP3 BIT RATE : 128 KBPS, SAMPLING RATE : 44.1KHZ
- NO SONG TITLE WILL BE RECORDED DURING ENCODING MODE
- TO INTERRUPT THE RECRODING, PRESS THE “ RECORD “ BUTTON AGAIN DURING RECORD MODE.
- THE SYSTEM WILL STORE THE FILE TO USB SORCE FIRST IF BOTH USB AND SD SLOT ARE BEING OCCUPLIED DURING ENCODING OF PHONO OR TAPE MODE.
- **COPY MP3 FILE FROM USB/SD WILL BE SUCCESSFUL ONLY ENTIRE SONG BEING COPIED, IF TERMINATE THE COPYING PROCESS INTERMEDIATELY, THERE IS NO TRACK BEING RECORDED NOR STORED TO THE USB OR SD/MMC CARD**

D) ENCODING BITRATE (BY REMOTE HANDSET)

YOU CAN SELECT THE DESIRED BITRATE DURING ENCODING, THE HIGHER BIT RATE WILL GENERATE BETTER SOUND QUALITY AND OCCUPY MORE SPACE OF MEMORY. THE SELECTABLE RANGE IS FROM 64 /128 / 192 KBPS RESPECTIVELY

1) SET IN " PHONO " FUNCTION (6) & REMAIN STOP MODE.
2) PRESS THE " INFO " FUNCTION AND THE LCD DISPLA (2) WILL SHOW THE DEFAULT BITRATE (128 KBPS)
3) PRESS SKIP ⏭ OR ⏮ BUTTONS (13,24) TO SELECT THE DESIRE BITRATE FOR ENCODING.
4) PRESS AGAIN THE " INFO " TO CONFIRM THE SETTING AND THE LCD DISPLAY (2) WILL RESUME TO " PHONO " MODE

E) TRACK SEPARATION (BY REMOTE HANDSET)

YOU CAN DIVIDE THE RECORDING MUSIC FROM PHONO OR TAPE TO USB/SD TRACK BY TRACE DURING ENCODING. EVERY TIME WHEN PRESS THE " TS " (TRACK SEPARATION) BUTTON ONCE AT REMOTE HANDSET DURING ENCODING FROM PHONO OR TAPE TO USB/SD, THE SYSTEM WILL GENERATE A NEW TRACK AND CONTINUOUS THE RECRODING. THE TEXT " PHONO " OR " TAPE " AT LCD DISPLAY (2) WILL FLASHING ONE TIME, IT MEAN THE UNIT IS CREATING A NEW TRACK SUCCESSFULLY.

FILE DELETE AT USB/SD (BY REMOTE HANDSET)

THE SYSTEM IS ABLE TO ERASE THE FILE STORED INSIDE THE USB PEN DRIVE OR SD CARD BY FOLLOWING:-

A) SINGLE FILE DELETE

1 · SELECT AT " USB " OR " SD " MODE.
2 · PRESS AND HOLD THE " INFO " BUTTON FOR 3 SECONDS AND THE LCD DISPLAY (2) WILL SHOW (DEL ---001)
3 · PRESS SKIP FORWARD⏭ OR SKIP BACKWARD⏮ BUTTON TO SELECT THE FILE GOING TO DELETE
4 · PRESS THE " REC " BUTTON TO ENTER " YES / NO " MODE AND THEN PRESS SKIP FORWARD⏭ OR SKIP BACKWARD⏮ TO SELECT " YES " OR " NO ".
5 · PRESS THE " REC " BUTTON AGAIN TO CONFIRM THE SETTING.

B) ALL FILES DELETE (BY REMOTE CONTROL)

1. SELECT AT " USB " OR " SD " MODE.
2. PRESS AND HOLD THE " INFO " BUTTON FOR 3 SECONDS AND THE LCD DISPLAY (2) WILL SHOW (DEL ---001)
3. PRESS AND HOLD THE " INFO " BUTTON AGAIN AND THE LCD WILL SHOW " FORMAT / Y/N " AND FLASHING. THEN PRESS SKIP FORWARD⏭ OR SKIP BACKWARD⏮ TO SELECT " Y (YES) " OR " N (NO) ".
4. PRESS THE " REC " BUTTON AGAIN TO CONFIRM THE SETTING.

REMARK :

- ALL THE FILES INSIDE THE USB STORAGE MEDIA OR SD CARD WILL BE DELETED COMPLETELY AFTER CONFIRMING TO " Y (YES) " MODE.
- PRESS " STOP " BUTTON ONCE AT REMOTE HANDSET TO QUITE DELETE MODE

REMOVING OF USB / MEMORY CARD

TO REMOVE THE USB / MEMORY CARD, TURN OFF THE POWER OR SWITCH THE FUNCTION MODE TO EITHER CD, TAPE OR TUNER FIRST. FOR USB PORT – UN-PLUG IT BY PULLING OUT THE USB SOCKET DIRECTLY, FOR MEMORY CARD – PRESS THE MEMORY CARD INWARD & THEN RELEASE, NOW THE CARD BEING PARTIALLY EJECT AND YOU CAN REMOVE IT BY HAND.

X-BASS SOUND EFFECT

PRESS THE X-BASS BUTTON (17) TO ACTIVE X-BASS FUNCTION AND EHNANCE THE BASS EFFECT AT " ON ▁▆▁ " POSTION.

REMOTE CONTROL TRANSMITTER

BATTERY INSTALLATION (BATTERY NOT PROVIDED)

THE INFRA-RED TRANSMITTER REQUIRES 2 PC AAA SIZE BATTERY FOR OPERATION

BUTTON DESCRIPTION

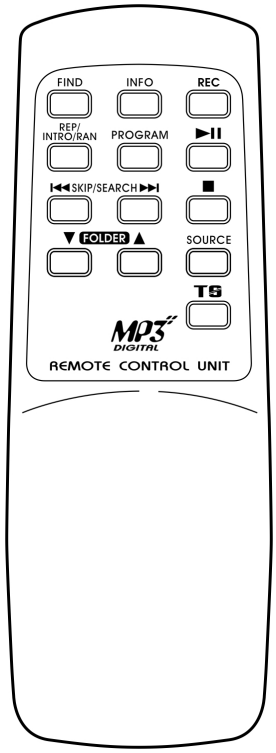

1) FIND	IN MP3 PLAYBACK, PRESS TO ACTIVE FILE/FOLDER NAME SEARCH FUNCTION.
2) INFO	PRESS TO SELECT ENCODING BITRATE
3) REC	PRESS TO ACTIVE ENCODING OR RECRRDING FUNCTION
4) REP/INTRO/RAN	IN SD/USB MODE, PRESS TO ACTIVE REPEAT / INTRO / RANDOM FUNCTION
5) PROGRAM	IN SD/USB MODE, PRESS TO ACTIVE PROGRAMMING FUNCTION
6) PLAY/PAUSE▶II	IN SD/USB MODE, PRESS ONCE TO START PLAYBACK. PRESS AGAIN TO ENTER PAUSE MODE.
7) SKIP/SEARCH FORWARD▶▶I	PRESS ONCE TO SKIP TO NEXT TRACK, PRESS & HOLD FOR SEARCH FORWARD
SKIP/SEARCH BACKWARDI◀◀	PRESS ONCE TO SKIP TO PREVIOUS TACK.PRESS & HOLD FOR SEARCH BACKWARD
8) STOP■	IN SD/USB MODE, PRESS TO STOP PLAYBACK OR CANCEL THE STORED PROGRAM.
9) FOLDER UP▲/DOWN▼	IN SD/USB MODE, PRESS TO SELECT FOLDER UP OR DOWN
10) SOURCE	IN SD/USB MODE, PRESS TO SELECT SD OR USB MODE REPEATLY
11) TRACK SEPARATION	PRESS TO DIVIDE THE RECORDING TRACK AT TURNTABLE OR TAPE ONE BY ONE DURING ENCODING

LENOXX

LEADERS IN SOUND ENTERTAINMENT

Lenoxx Electronics (Aust) Pty Ltd
6 Oban Court Laverton North 3026
Tel: + 61 3 9267 2100 - Fax: + 61 3 9267 2199
Email Address: mottel@lenoxx.com.au; george@lenoxx.com.au;
marie@lenoxx.com.au
Web site: www.lenoxxelectronics.com